Bluetooth App User Manual

Table of contents

1-Download the APP.
2-Connect the APP.
3-Overview of the APP interface.
4-Modification Setting.
4.1 How to modify the communication protocol to your inverter type.
4.2 How to modify to the correct capacity.

1-Download the APP.
iOS APP download:
https://apps.apple.com/cn/app/%E6%9E%81%E7%A9%BAbms/id142572569

Android APP download:
https://play.google.com/store/apps/details?id=com.jktech.bms&hl=en_US&gl=US

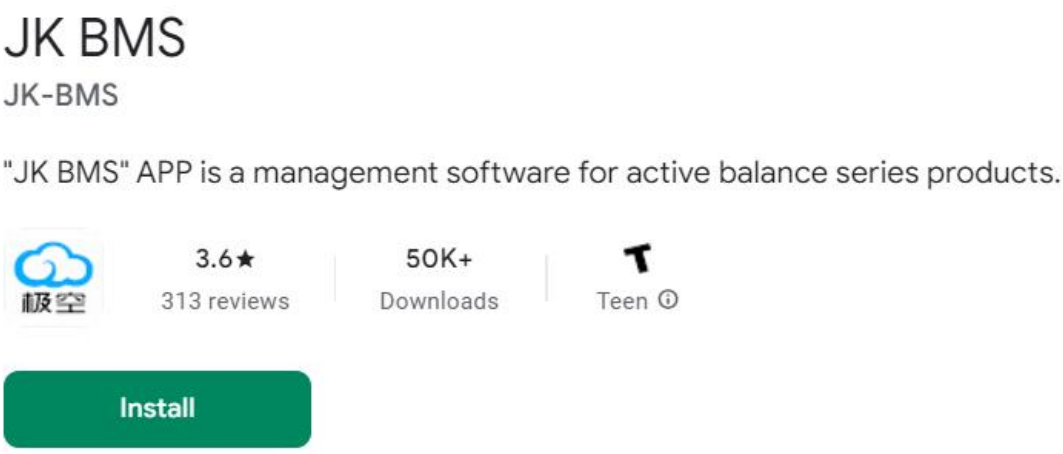

2-Connect the APP.

2.1 Download the APP on mobile as instructed and open to connect.

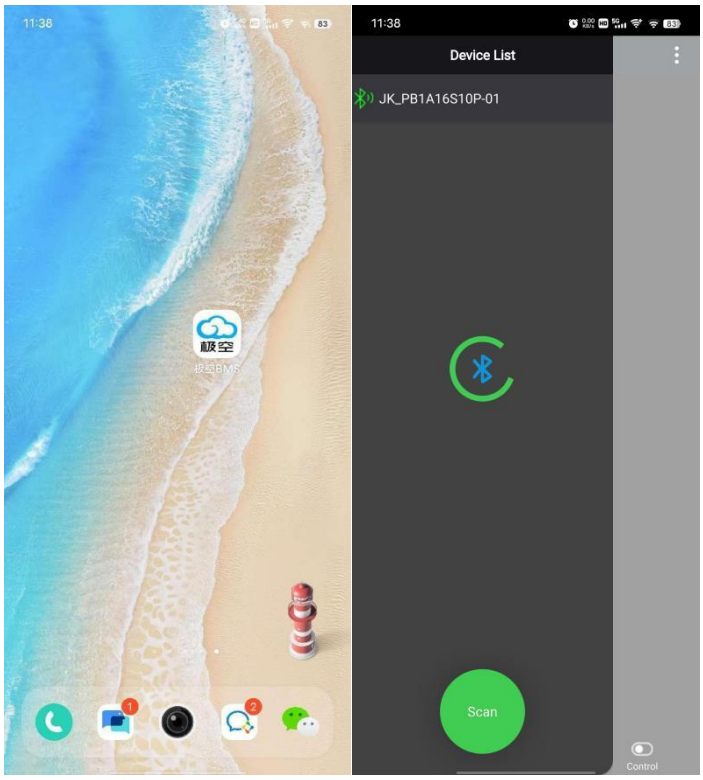

2.2 Enter the user password 1234 to have access to the battery app.

3-Overview of the APP interface

Status Setting Control

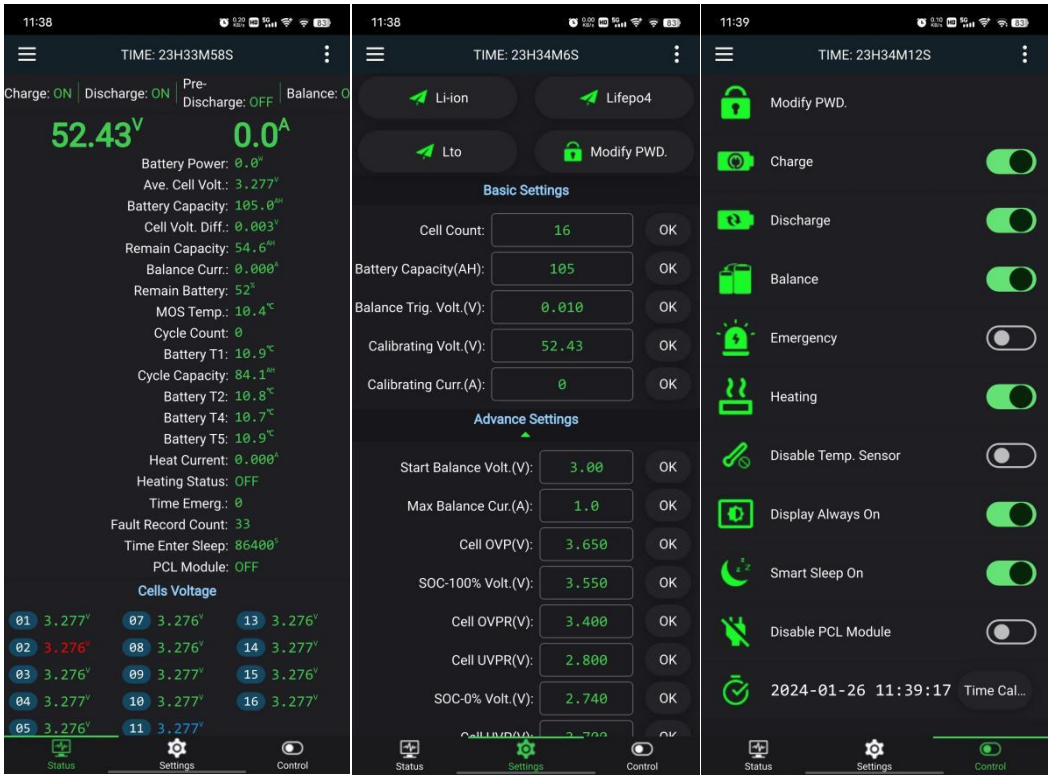

P.S.Default password “admin” or “123456”.

4-Modification Setting

You can modify the parameters in the interface of Settings. Click Verify PWD. Enter admin or 123456.

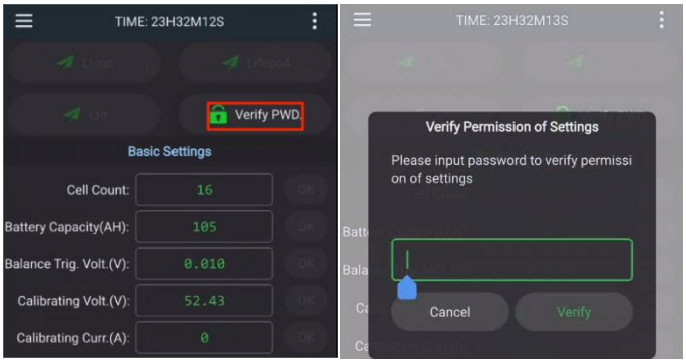

4.1 How to modify the communication protocol to your inverter type.

Our default protocol is CAN protocol: “002-PYLON-Low-voltage-V1.2”

If your inverter is Growatt, you can select “003 -Growatt BMS CAN-Bus-protocol…” and then click OK.

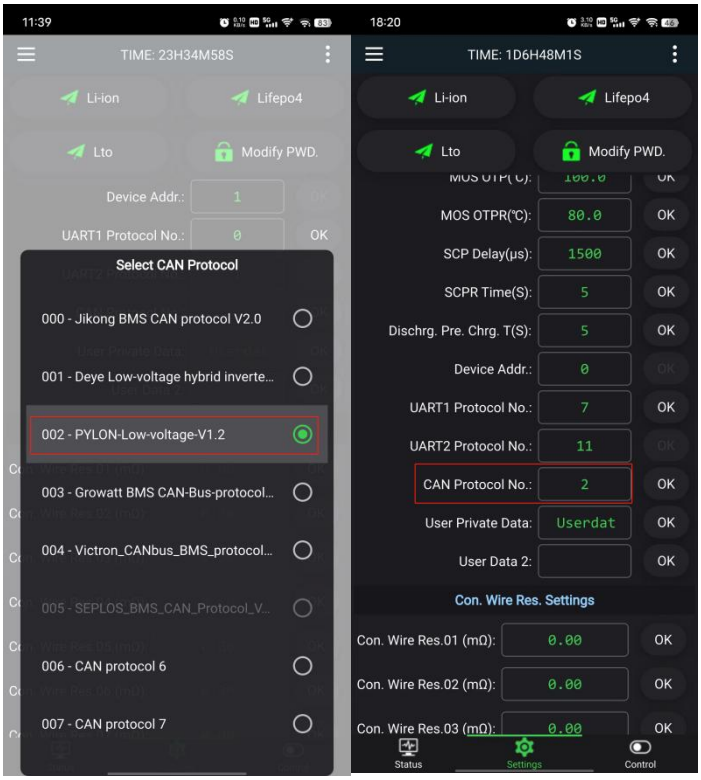

4.2 How to modify to the correct capacity.
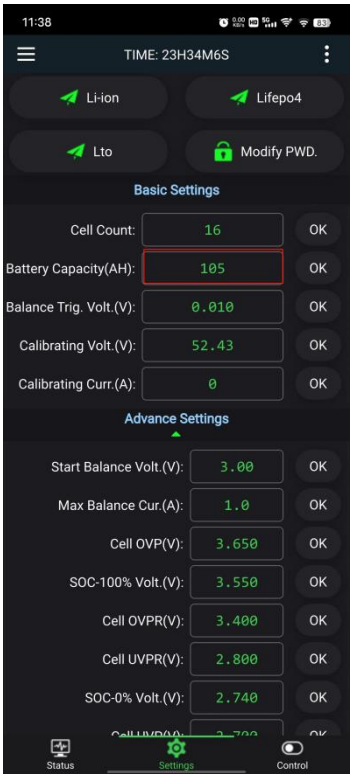
You can enter 105 into the Battery Capacity(AH) and click OK.